



# How to Measure For Bonded Vinyl Replacement Windows

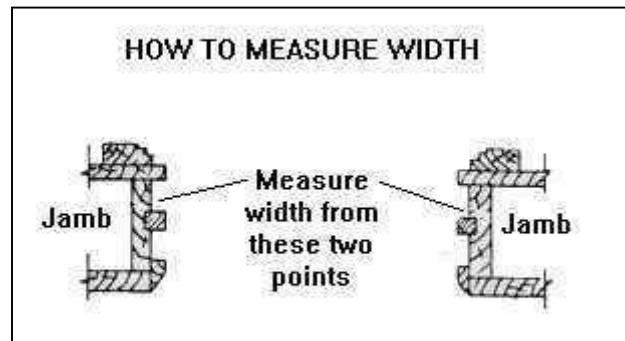

Measure between the jambs of the existing opening at the top and bottom., moving the sash as necessary. Order based on smallest measurement.

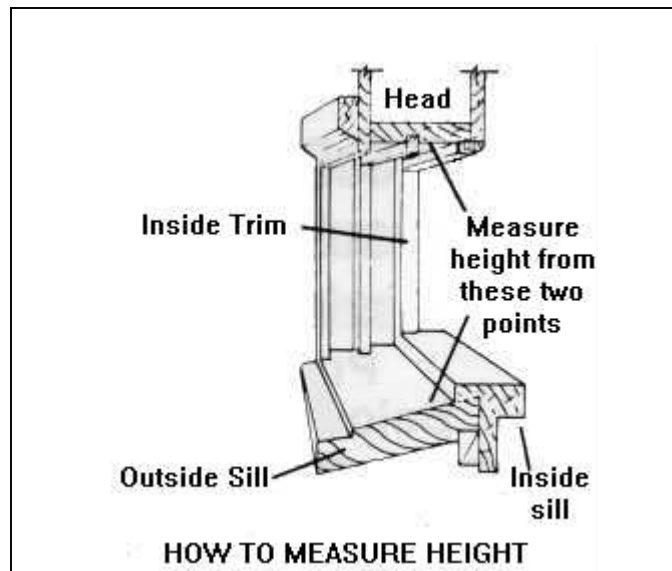

Measure from the high point of the sill to the top of the casing of the existing opening on both the left and right sides. Order based on smallest measurement.